


PACKAGE CONTENTS

- 1 - Assembly Instructions Sheet
- 1 - 110-Ball Capacity Basket
- 1 - Handle w/Ball Lock
- 1 - Handle

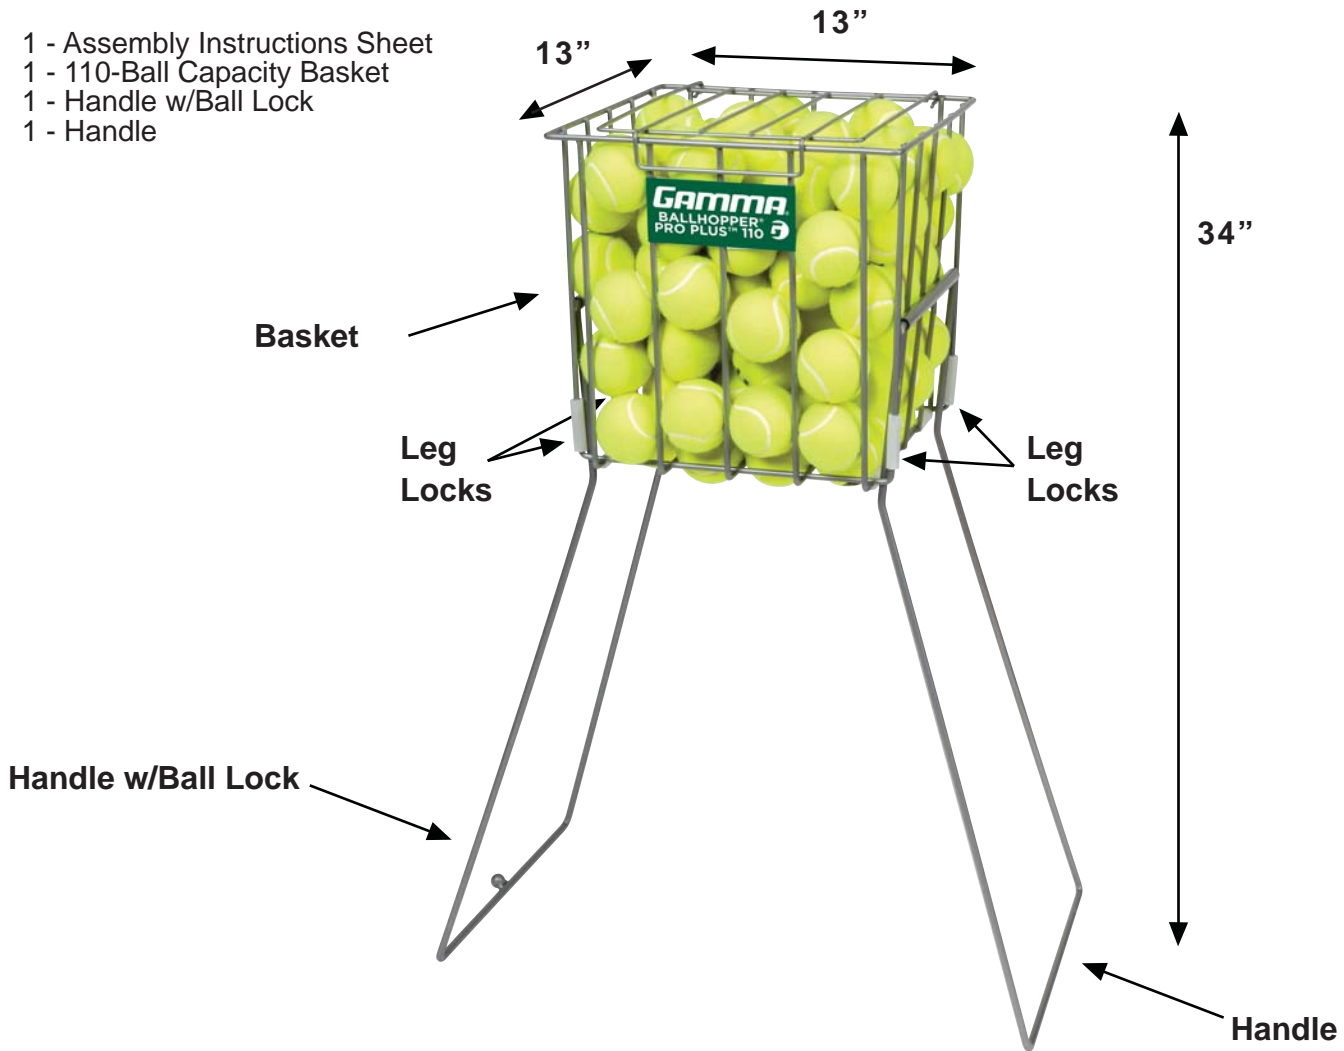

ASSEMBLING THE BASKET

Step 1: With the Basket sitting on the ground, take one Handle, spread the ends of the Handle, and insert the Handle ends into the Handle tube on one side of the Basket. Repeat this step for the other Handle on the opposite side of the Basket. Refer to the pictures on page 2 to correctly orient the Handles during assembly.

Step 2: Take the Basket lid and, with the hooks facing down, place the lid on top of the Basket with the hooks near the back. Slide the hooks over the top wire of the Basket and pull toward you until the lid hooks pop on to the Basket. When installed properly the lid will close completely and be secured by the lip of the lid.

PICKING UP BALLS

With the Basket sitting on the ground raise the Handles and overlap the ends to engage the Ball Lock, pick up the Basket by the Handles and place it down on top of a ball. With downward pressure, the ball will pop through the wires at the bottom of the Basket. Once balls are picked up, they will not fall out through the wires at the bottom.

DISPENSING BALLS

When you are done picking up balls and are ready to dispense balls from the Basket, disengage the Ball Lock holding the ends of the Handles together. Pick up the Basket, allowing the Handles to swing toward the ground. Stand the Basket up on the Handles and push the Handles inward toward the Basket, snapping the Handles over the Leg Locks inside the outer wires of the Basket. Open the lid to dispense balls.

HANDLE ASSEMBLY



Turn Handle end at a downward angle to begin installation process.



Once Handle end is aligned with Handle tube, push Handle end into the Handle tube.



Push Handle end completely into Handle tube until positioned as pictured.

Tip: Flexing the exterior Basket wire down to make a clear path for the Handle end may make installation easier.

LIMITED ONE-YEAR WARRANTY

GAMMA SPORTS ("GAMMA") warrants to the original purchaser that the BALLHOPPER Basket ("EQUIPMENT") purchased is free from defects in materials and workmanship for a period of ONE (1) year from the date of original purchase. Should any defects develop under normal use within the specified time period, GAMMA will, at its option, repair or replace the defective EQUIPMENT provided it is returned to GAMMA prepaid at the purchaser's expense. This warranty does not apply to any damage or defect caused by negligence, abuse, misuse, unauthorized alteration, shipping, handling, or wear and tear as a result of normal use.

GAMMA's obligation under this warranty is limited to replacement or repair of the defective EQUIPMENT, and no one is authorized to promise any other liability. GAMMA shall, in no event be liable for any incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights which vary from state-to-state.

To return defective EQUIPMENT, a return authorization (RA#) must be obtained from a GAMMA customer service representative by calling 1-800-333-0337. The RA# must be clearly marked on the outside of the shipping carton being returned. All returns must be shipped prepaid by the customer to GAMMA. Please retain the original shipping carton and packing materials for any future shipments. GAMMA will not be responsible for EQUIPMENT which is not returned in the original undamaged packaging.